# Recyko NiMH Speed battery charger (USB) W431

Instruction Manual

#### Unpacking and checking

You should find the following items in the packaging. Please make sure they are undamaged and in good working order.







ecyko NIMH Speed battery charge (USB) W431



USB-A to USB-C charging cable (input/output)

For exact product contents, please refer to "In the box" section of the packaging,

#### Charging instructions









Fig. 1	Fig, 2a Fig, 2b	Fig. 3
LED indication	Condition	LED indicator
	Charging in progress	Green (Flashing)
	Bad or single-use batteries	Green (Rapid flashing)
	Charging completed	Green (Constant)
	Input voltage warning	Green (Rapid flashing in All LEDs)

## Charging time<sup>4</sup>

Recyko batteries ( 2 or 4 pcs)

Size	Capacity	Charging time
AA	1300-2600mAh	2-6.5 hrs
AAA	650-950mAh	2-4 hrs

^ Charging time is subjected to the power rating of the USB adapter with below output levels. Approximate charging time is based on the same battery size and capacity at ambient temperature (20°C). Approx, charging time for AA 2100 mAh / AAA 850 mAh batteries: 2.5-5 hours

DC 2.8V	Size	Quantity	Output level
	AA	2pcs	900mA
	~~	4pcs	450mA
	AAA	2pcs	400mA

### Read the instruction manual thoroughly before use. Keep the manual for future reference.

## Features Auto power cutoff: Negative delta V, safety timer & temperature cut-off protections.

Charging instructions 1. Open the charger cover, Insert 2pcs or 4pcs NiMH batteries into the battery charger according to the battery polarity (Fig. 1), 2. Connect the cable to the battery charger (Fig. 2a), 3. Connect the other end of the USB cable to a smartphone wall charger (Fig. 2b) or similar USB port on a power bank or USB car charger. 4. Charging will commence and the LED indicators will show the status of the batteries (Fig. 3). The LED indicators will flash green when the batteries are charging. For bad or single-use battery, the rapid flashing green color will be shown in the LED indicator when charging, 5, Once the batteries are fully charged (LED constant green), remove the batteries and disconnect the battery charger from the power supply.

## For best performance and safety, always use NiMH Recyko batteries.

Safety information It is normal for batteries to become hot during charging and they will gradually cool down to room temperature after fully charged. Remove batteries from the electrical device if the device is not going to be used for a long time. This charger is designed to charge only NiMH battery. Charging other batteries may lead to explosion, battery rupture or leakage, personal injury or property damage. Never charge corroded, damaged or leaking rechargeable batteries. Make sure the charger is used between 0 - +35°C, Battery storage temperature: -20 - +35°C This charger is designed for indoor use only. Do not expose the charger to rain, snow or direct sunlight. Do not use the charger in humid conditions. Do not use the charger if it has a damaged plug. Do not use the charger after it has been dropped or damaged. Do not open/disassemble the charger This charger is maintenance-free but should be wiped clean regularly with a dry and soft cloth. Do not use abrasives or solvents. Unplug the charger before cleaning. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision, The product complies with EMC directive 2014/30/EU. RoHS directive 2011/65/EU.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation



for product information

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

#### 打開包裝及檢查產品

您可於包裝中找到以下產品。請確保它們完好無損,並運作正常。







綠再快快充 螺氮電池充電器 (USB) W431



USB-A至 USB-C 充電線 (輸入/輸出)

關於包裝中的產品,請組即包裝上的「內附」一樣。







DE SE



- 1011	IIII Z a	IMI Z D	mis
LED指示燈	充電狀態	LED指示	燈
	充電進行中	綠燈(閃	煉)
	已損壞或一次性電	池 綠燈(快	速閃爍)
	充電完成	綠燈(長	亮)
	輸入電壓警告	綠燈 (所	有LED燈-快速閃爍)
充電時間			
	大小	電容量	充電時間
綠再鎳凱充電電池(2或4粒)	AA 3號	1300-2600mAh	2-6.5 小時
	AAA 4號	650-950mAh	2-4 小時

man-

#### 輸出電壓及電流

閉存雷器。

	大小	電池數量	輸出電流
v	AA 3號	2粒	900mA
	AA 39/	4粒	450mA
	AAA 4號	2粒	400mA
	AAA 490	490	300mA

#### 使用前請先仔細參閱說明書,並保留說明書作日後參考。

DC 2.89

#### 為確保最佳效能及安全起見,請使用錄再鑲氫充電電池。



請勿將電器當作未分類的城市垃圾·應使用分類收集設施。請聯絡當地政 府了解有關回收系統的資訊。如果電器被乘置於堆填區或廢物收集區, 有害物質會渗透到地下水,進入食物鏈·破壞你的健康和福祉。



了解更多產品資訊

充電時間受USB轉換器的額定功率及以下輸出電壓及電流影響。模據相同容量及大小之電池於最佳環境適值(20°C)之充電時間。AA 3號 2100mAh/AAA 4號 850mAh電池的充電時間約2.5-5小時。

#### 产品开封及检查

包装内含以下部件,请确保它们完好无损,且能正常工作。



绿再快快充 镍氯电池充电器 (USB) W431



USB-A至 USB-C 充电线 (输入(输出)

关于包装中的产品,请查阅包装上的「包装」一栏。

## 充电步骤图示



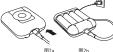




图3

ED灯指示	状态	LED指示	切
	充电中	绿灯 (闪	烁)
	失效电池/一次性	电池 红灯(快	速闪烁)
	充电完毕	绿灯 (长	亮)
E电时间^	输入电压警告	銀灯 (所	有LED灯-快速闪烁)
	型号	电容量	充电时间(小时)
绿再镍氢充电电池 (2或4粒)	5号电池	1300-2600毫安时	2-6.5 小时
	7号电池	650-950毫安时	2-4 小时

- 充电时间受USB转换器的额定功率及以下输出电压及电流影响。基于在最佳环境温度(+20°C)条件下,相同电池型号和容量的大致充电时间。
- 5号2100喜安时及7号 850 喜安时杂由由油,约2 5-5小时杂蒲。

#### 输出电压及电流

v	型号	电池数量	输出电流
	er IIII eth 2da	2粒	900mA
	5号电池	4粒	450mA
	7号电池	2粒	400mA
	1 3 - 6 / 6	420	300

#### 使用前请先仔细参阅说明书,并保留此说明书以备参考。

产品特点 自动断电保护装置:防过充、防过温、安全定时保护

奔槍噴用,15开來自腐保产品。網報电池的正负极置入2014年10章里地方來自藉中(201)。2 孫先雖結婚指列电流表 每差1 (2023.)。3 孫另一個USB充电抵插头连接到电源转换器 假2021.6 参助电源和汽车充电器的USB充电接口。4 进行 充电时,LED指示打将显示电池的发电收态(2033.)。当电池充电时,综合LED指示订将内压。检测到效效或一次性 电池时,其位LED提示订将注波闪烁。但从充电器上数下这些电池。5 充电完成后,综色LED订将长系。请将充电器电摄 接触;并将充电电流

## 为确保最佳充电效果及安全保障,请与绿再镍氢充电电池配合使用。

注書事項 充电电池完电时发热器为产层观象,充电电流后将紧销客至温,充电器如长时间不用,请将充电电流的 は 經再充电器只可分锂重似MHI)充电电池充电。给其他种类电池充电可能导致删除、电池被钢或泄漏、人身伤害或 财产损失。切动种特致、损坏或泄漏的可负电电池充电。请编保在位至3强低起之间使用充电器充电。20至33组织是2 间存放充电池。充电器仅恒至均使用,切动将其置于下隔、下雪切削光量起照相的环境中,请勿在满湿的环境中,是 产电器,如插头损坏,请勿使用充电器。如充电器跌落排环,请勿使用充电器。谓勿自行所开充电器,充电器无偿特别保 养,只能定期原来状于布排就干净。请勿使用磨鬼或溶消,走进行清洁的,请决就出电源插头。5岁以上上履位罗以下禁 用人。预况有能处土须在坚护人监督及指导下使用此产品。此产品非玩具,严禁供儿童玩耍。在无成人监管下,严禁从 审自行满方的保存中直接。

为绿再镍氢充电电池充电 1. 新的充电电池使用2-3次后,才能达到最佳效果。2.已为套装内的充电电池预充电。 购买后可立即使用。如果电池不能为您的设备正常工作,请重新充电。



请勿将电器随置丢弃于未分类的垃圾中,而应使用特谈的收集设施。 请联络有关政府部门查询可用的电子接物收集系统。若电器被弃置于 垃圾填埋场中,有案物照可能会渗透入地下水中,并进入食物链,从而 胀险体效健康



了解更多产品资讯